Forzaspira®

C110

REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO
www.polti.com

POLTI
NATURAL HOME FEELING

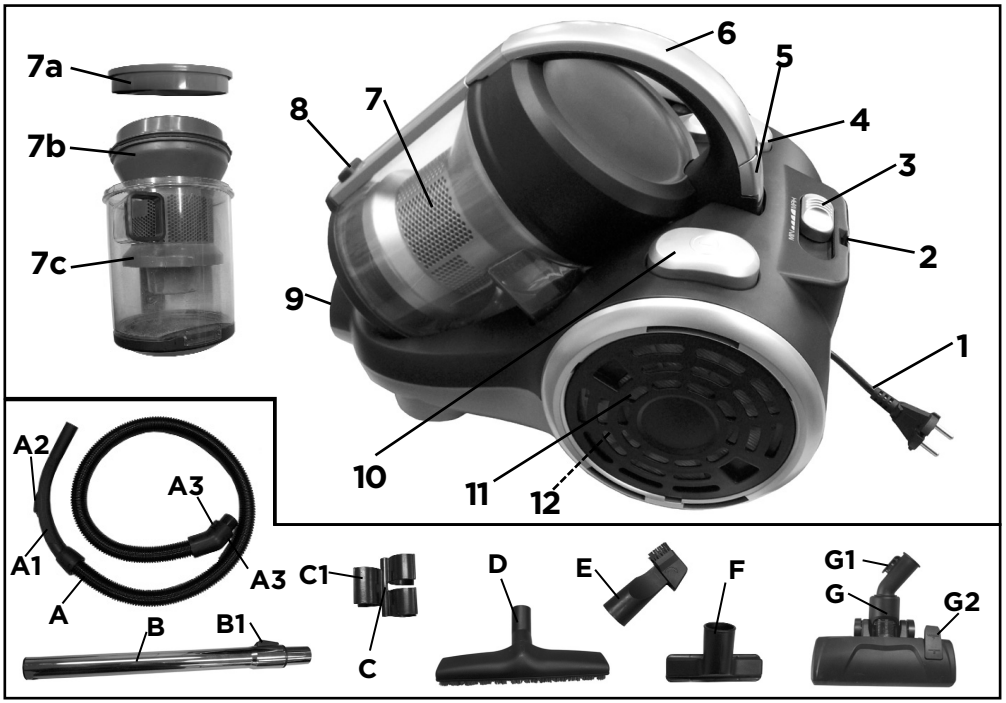
7a
7b
7c
6
5
8
7
4
3
2
9
1
10
11
12
A2
A3
A1
A3
A
B
B1
C1
C
D
E
F
G1
G
G2

Fig. 1

Fig. 2

Fig. 3

Fig. 4

Fig. 5
5a

Fig. 6

Fig. 7

Fig. 8

Fig. 9a
Fig. 9b

Fig. 10

Fig. 11

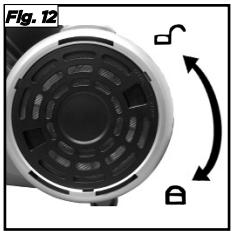
Fig. 12

Fig. 13

PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- If this instruction manual is lost, it is possible to review it and/or download it from the web site www.polti.com
- Unpack the product and make sure it is intact as well as all the accessories listed in the key. If in doubt, do not use the product and contact an Authorized Service Centre.
- This appliance has been designed only for domestic use.
- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons provided they are instructed in advance on its safe use and only if informed of the dangers inherent to the product.
- Children must not play with the appliance.
- The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult.
- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- Keep all the parts of the packaging out of the reach of children, they are not a toy. Keep the plastic bag out of the reach of children: danger of suffocation.

SAFETY WARNINGS:

Risk of electric shock and/or short circuit:

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- Always turn off the appliance at the on/off switch before unplugging it.

- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.

SAFETY WARNINGS:

Risk of injuries and/or burns when using the appliance:

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Do not use if the appliance has been dropped and has visible signs of damage.

SAFETY WARNINGS:

using the appliance:

- Never leave the appliance exposed to the weather.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Press the buttons only with a finger, without excessive force and avoid using a pointed object such as a pen.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.
- It is necessary to keep the unit in horizontal position during operation.
- Always rest the appliance on a stable surface.
- Do not vacuum up liquids
- Do not use the appliance to suck up acids or solvents, as these might cause serious damage to the appliance and above all do not suck in explosive dust or liquids, as these could cause explosions on coming into contact with the inside components of the appliance.
- Do not vacuum up toxic substances.
- Do not suck up burning or incandescent objects such as embers, ash or other material in which combustion is taking place.

Read these instructions carefully before using the appliance.

Congratulations on your purchase and welcome to the Polti world of cleaning.
We know how important it is to be able to depend on a reliable appliance for every day cleaning, that is why your vacuum cleaner has been designed to let you experience efficient as well as quick, fast cleaning. Powerful suction, easy and intuitive use and a wealth of accessories make your vacuum cleaner the ideal assistant.

Please also visit our website www.polti.com, where you can find all the information and advice necessary to better use the product, and where you can register your newly purchased product to receive exclusive benefits.

KEY

- **1)** Power Supply cable
- **2)** Parking housing
- **3)** Cursor to adjust suction
- **4)** Cable winder button
- **5)** Dust container release cover
- **6)** Dust container handle
- **7)** Dust container
  - **7a)** Container filter
  - **7b)** Filter assembly
  - **7c)** Container
- **8)** Dust container opening button
- **9)** Connector hose
- **10)** ON/OFF switch
- **11)** EPA filter grill cover
- **12)** EPA fllter

ACCESSORIES

- **A)** Hose
  - **A1)** Hose handle
  - **A2)** Manual suction regulator
  - **A3)** Tube lock-in button
- **B)** Telescopic tube locking button
- **C)** Accessories holder
  - **C1**) Pipe hook ring
- **D)** Parquet brush
- **E)** Lance
- **F)** Small nozzle
- **G)** Universal Brush
  - **G1)** Hook for attaching to accessories holder
  - **G2)** Brush selector for carpets / floors

CE *This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).*

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

CORRECT USE OF THE PRODUCT

This appliance is intended for home use for vacuuming solids as described and in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them, as you may find them useful in future.

Polti declines liability for any damage or accident derived from any use of this appliance which does not comply with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.

The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

PREPARATION

- Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.
- Insert the suction opening of the flexible tube (**A**) into the connector (**9**) (Fig. 1) (to disconnect it, press the buttons (**A3**) and pull the tube Fig. 2).
- Unwind the power supply cable (**1**) and insert the plug into a suitable power socket.
- Press the ON/OFF switch (**10**). The appliance will start to operate. The ON/OFF switch (**10**) can be pressed with your foot to avoid having to bend over.
- You can adjust the suction power with the cursor (**3**). Move it to the right to increase the suction power. To reduce it, just move the cursor to the left (Fig. 3). We suggest minimum level for curtains, medium-low for sofas, armchairs and pillows, medium-high for carpets and high for floors and hard surfaces (ceramic, marble etc.).
- With the manual suction regulator (**A2**) it is possible to intervene promptly in case of an accidental suction (i.e. curtains) by reducing the suction power. We recommend operating the appliance with the regulator open on curtains, rugs, sofas, etc. Move the regulator forward until the hole is exposed on the handle. To return to maximum power, move the regulator backwards until the hole is covered.
- To end suction, press the ON/OFF switch again (**10**).

EMPTYING AND CLEANING THE DUST CONTAINER

- Switch off the appliance using the ON/OFF switch (**10**). Disconnect the power supply cable (**1**) from the mains.
- Unhook the dust container from the vacuum cleaner by opening the cover (**5**) and pressing the dust container release button (**5a**) (Fig.5).
- Remove the dust container (**7**) lifting it by the handle (**6**).
- Press the button (**8**) located on the container (**7**) in order to open the container and remove the dirt collected (Fig. 6).

ATTENTION: *since by operating the button (**8**) the lower base of the reservoir opens, it is recommended that this operation be done over a waste bin.*

- Remove the handle (**6**) by turning it anti-clockwise compared to the container (**7c**), aligning the two reference arrows (Fig. 9b).
- Remove the container filter (**7a**) and pull out the filter unit (**7b**) and remove any remaining dirt.

  N.B.: We recommend to clean the container after each use.

  ATTENTION: *never exceed the "MAX" level shown on the dust container (**7**), otherwise the filters will clog reducing the suction power of the appliance.*

- Replace the filter unit (**7b**) in the container (**7c**), making sure that the two arrows are aligned (Fig. 10).
- Replace the air filter (**7a**).
- Reassemble the handle (**6**) on the container (**7c**) turning it clockwise, making sure to align the two arrows (Fig. 9a).
- Reposition the dust container on the appliance by repeating the steps described previously in the opposite order (Fig. 7).

  ATTENTION: *do not use the appliance without the dust container (**7**) complete with filter.*

USING ACCESSORIES

Accessories may be connected directly to the hose (**A**) or to the telescopic tube (**B**).

Using the telescopic tube (B)
The length of the telescopic tube can be adjusted. Just press the button (**B1**) to extend it or shorten it at will.

Use of the accessories holder (C)
The accessories holder allows the accessories to be fastened (**E**) and (**F**) to the telescopic tube (**B**), so they are always close at hand. Just hook the single ring (**C1**) to the telescopic tube and insert the accessories (**E**) and (**F**) in the 2 other rings (Fig. 11).

Parquet brush (D)
The parquet brush is designed to clean delicate surfaces; it has bristles and wheels in a special material
to avoid damaging the surfaces.

Small nozzle (F)
The small nozzle is recommended for cleaning upholstery surfaces such as the joints of sofas, armchairs, mattresses, car upholstery, etc.

Lance for corners cleaning (E)
This lance is suitable for thorough cleaning of the more difficult-to-reach places, like skirting-boards, sofa gaps, armchairs, upholstered furniture, car seats.

Using the universal brush (G)
Connect the brush to the telescopic tube (**B**). If you move the selector on the brush (**G2**) and press with a foot, you can change the suctioning surface without bending down. The position with bristles extended is recommended for all non-carpeted floors. The position without bristles is recommended for carpets.

AUTOMATIC CABLE WINDER

Before starting the automatic cable rewind, by pressing the button (**4**), make sure that the power plug is disconnected from the mains electricity. We recommend following the cable during the operation.

PUTTING THE APPLIANCE AWAY

It is possible to replace the appliance by resting the
brush (**G**) with the tube (**B**) in the parking housing (**2**) as shown in Figure 8.

CARE OF YOUR APPLIANCE

- **Before attempting any maintenance operation, always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

CLEANING THE DUST CONTAINER

- Pull out the dirt container and remove the air filter and the filter unit, as described in the paragraph “Emptying and cleaning the dust container”.
- Rinse all the components under running water and let them dry.
- Replace everything repeating the steps described previously in the reverse order.

REMOVING AND CLEANING THE EPA FILTER

- Turn the grill (**11**) anti-clockwise (Fig. 11) and remove the filter (**12**) (Fig. 12).
- Rinse the filter under cold running water.
- After washing it, shake it gently to eliminate any dirt reside and excess water.

ATTENTION

- Allow the filters to dry naturally, away from direct sources of heat. It is advisable to wait 24 hours before replacing the filters in the appliance.
- Replace the filters with a new ones if they are torn.
- The filters should be cleaned every 4 months.
- Do not clean the filters with the brush as they can be damaged, reducing their filtering capacity.
- Do not use detergents, do not rub the filter, and do not wash it in a dishwasher.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not turn on	Power supply cable (1) not inserted ON/OFF switch (10) is turned off	Connect the power supply cable (1) to a suitable electric socket. Turn on the ON/OFF switch (10).
The vacuum cleaner does not suction	Flexible hose / telescopic tube clogged. Dust container (7) over full.	Clean the tubes. Empty the dust container (7)

WARRANTY

WARRANTY CONDITIONS

For repairs, the appliance must be accompanied by proof of purchase.
Polti products are guaranteed to the original purchaser for two years from the date of purchase as shown on a valid receipt issued by the seller.
This guarantee does not affect the consumer's rights under European Directive 99/44/CE regarding certain aspects of the sale and guarantee of consumer goods; consumers should address claims under these provisions to the retailer where they purchased the goods.
This guarantee is effective in countries where European Directive 99/44/CE has been implemented. Local guarantee legislation applies in all other countries.

WHAT THE WARRANTY COVERS

During the guarantee period, Polti will repair products with defects in workmanship or materials at no charge to the customer for either labour or materials.
In case of irreparable defects, Polti S.p.A. may replace the product free of charge.
A minor patent defect for which it was not possible, or is excessively expensive, to repair or replace does not give the right to terminate the contract.

To have work performed under this guarantee, consumers must contact an Authorised Polti Technical Assistance Centre. The consumer must present a valid receipt issued by the seller at the time of purchase as evidence of the date of purchase; without proof of purchase and the relative date, the work will be charged. Therefore, please store your receipt carefully for the entire warranty period.

WHAT THE WARRANTY DOES NOT COVER

The warranty is subject to limitations and does not cover defects due to improper use or use other than that indicated in the instruction booklet which forms an integral part of the sales contract of the product. The warranty does not cover defects resulting from force majeure (fires, short circuits) or caused by third parties (tampering). The warranty does not cover damages caused by the use of non-original Polti parts, repairs or alterations performed by staff or service centres not authorised by Polti.

The guarantee does not cover parts that are damaged by wear or subject to normal wear (consumables such as filters, brushes, etc.). The guarantee doesn't cover any possible damage caused by limescale. Polti will accept no responsibility for any injury to people or animals or damage to objects directly or indirectly resulting from failure to follow the instructions provided in the instruction booklet, in particular the warnings and product maintenance instructions.
The warranty does not cover the assembly of accessories that have been modified or are not adapted to the appliance.

REGISTER YOUR PRODUCT

Register your appliance on our website at www.polti.com.

You will receive an email containing a promotional code and the instructions for taking advantage of the current offers.

To register your Polti product, you must enter, in addition to your personal information, the appliance serial number (SN) which you will find on the silver label, located under the product:

Example:



SERIAL NUMBER
(18 digit) SN

To save time and keep your serial number to hand, write it in the space provided on the back cover of this manual.

SN:

|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|

REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO

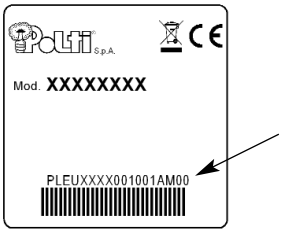www.polti.com

YOU WILL ENJOY SPECIAL OFFERS
POTRAI USUFRUIRE DI OFFERTE SPECIALI
VOUS POURREZ BÉNÉFICIER D'OFFRES EXCLUSIVES
PODRÁ DISFRUTAR DE OFERTAS ESPECIALES
SIE KÖNNEN DIE SONDERANGEBOTE NUTZEN
VOCÊ APRECIARÁ AS NOSSAS OFERTAS ESPECIAIS

CALL CENTER

ITALIA SERVIZIO CLIENTI	**848 800 806**
FRANCE SERVICE CLIENTS	**04 786 642 10**
ESPAÑA SERVICIO AL CLIENTE	**02 351 227**
PORTUGAL SERVIÇO AO CLIENTE	**707 780 274**
UK CUSTOMER CARE	**0845 177 6584**
DEUTSCHLAND KUNDENDIENST	**03222 109 069 6**

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM

POLTI
NATURAL HOME FEELING

Polti S.p.A. - Via Ferloni, 83
22070 -Bulgarograsso (CO) - Italy